

## Quel programmeur pour quel four?



	16	18	20	22	24	28	30	34	36	37	38	40	44	48	52	56	57	58	62	64	70	71	72	73
Page catalogue	N 100 - N 2200/14	NW 150 - NW 1000/H	N 100 DB50 - N 1500/14 DB..	W 1000 - W 7500/14	W ../.. DB..	H ../LB, H ../LT	H ../DB..	HT 08/16 - HT 450/18	HTC 16/16 - HTC 450/16	HFL 16/16 - HFL 160/17	HT ../.. DB..	HT ../.. LB, HT ../.. LT	HT ../.. LB DB.., HT ../.. LT DB..	NA 120/65 DB200 - NA 1500/60B DB200	LH 15/12 - LH 216/14, LF 15/13 - LF 120/14	L 9/11 BO - L 40/11 BO	LHT 08/17 BO	N 300 BO - NB 650 BO	HF ..	DF 23/244/5/10 WK - DF 64/320/5/10 WK	NB ..	WB ..	N 100/WAX - N 440/WAX	WHTC ..
Programmeur																								
B500	●	●													●								●	
C540	○	○													○								○	
C550																●								
P570	○	○	● <sup>1</sup>	●		● <sup>1</sup>		● <sup>1</sup>	● <sup>1</sup>	● <sup>1</sup>	● <sup>1</sup>	● <sup>1</sup>			○		●						●	
H500/API	○			○				● <sup>1</sup>	● <sup>1</sup>	● <sup>1</sup>	● <sup>1</sup>	● <sup>1</sup>			○								○	○
H1700/API			● <sup>1</sup>	○	●	● <sup>1</sup>	●	○	○	○	○	○	○	○	○			●	●		●	●	○	○
H3700/API			○	○	○	○	○	○	○	○	○	○	○	○	○					○	○	○	○	○
NCC			○	○	○	○	○	○	○	○	○	○	○	○	○				○	●	○	○	○	○

● Standard

○ Option

<sup>1</sup>En fonction de la version du four